


#1

# 3" WIDE DOUBLE SPLINE

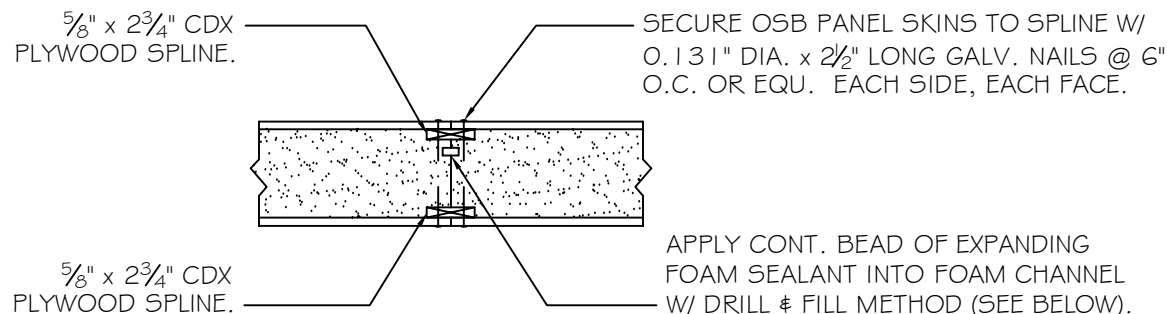


### DRILL AND FILL METHOD:

FROM EXTERIOR DRILL 3/8" DIA. HOLES IN PANEL CONNECTION @ 10" O.C. FOR WALL PANELS & @ 6" O.C. FOR ROOF PANELS ALONG ENTIRE LENGTH OF JOINT. INJECT FOAM INTO CAVITY FOR APPR. 5 SECONDS. FOAM MUST BE ALLOWED TO CURE FOR AT LEAST 24 HOURS BEFORE HARDENED FOAM BALLS ARE REMOVED FROM THE EXTERIOR. INJECT FOAM AS CLOSE AS POSSIBLE TO INTERIOR SKIN OF PANEL.

DBL. 3" WIDE PANEL SPLINE CONNECTION

SCALE: 1" = 1'-0"

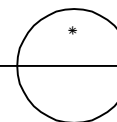

DETAILS ARE TYPICAL OF STANDARD CONDITIONS AND MAY NOT APPLY TO ALL PROJECTS. REFER TO FINAL PROJECT APPROVAL DRAWINGS FOR SPECIFICATIONS. PLEASE CONTACT FPI TECHNICAL DEPARTMENT FOR QUESTIONS AND/OR CONCERNS.

**Foard**  
PANEL

STRUCTURAL INSULATED PANELS  
P.O. Box 185, 53 Slow Drive, W. Chesterfield, NH 03466

[WWW.FOARDPANEL.COM](http://WWW.FOARDPANEL.COM)

(800) - 644 - 8885